



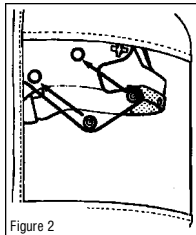

## 20NC Chin Strap Installation Instructions

*The 20NC chin strap fits any CC20, GR50, MB30 or PC90 airline respirator hood manufactured by E.D. Bullard Company.*

- Remove headband from hood.
- Snap chin strap stud buttons into the holes on each side of the headband, inserting from the inside.
- Align holes on chin strap to stud buttons and pull downward to lock in place (See Figure 1).
- Place headband on your head. Adjust chin strap length with the plastic slide.
- Remove headband from your head. Install headband into respirator hood by engaging four snaps on headband with the corresponding snap studs mounted in the lens (See Figure 2).

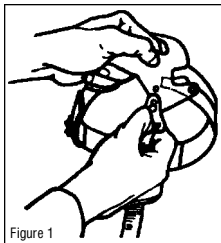

1898 Safety Way, Cynthiana, KY 41031-9303  
Toll-Free: 800-827-0423 • Phone: 606-234-6611  
Facsimile: 606-234-6858 • **Web Site:** <http://www.bullard.com>

Copyright 1996 by E.D. Bullard Company. All rights reserved, including the right of reproduction in whole or in part in any form.